

1. Power on your mobile hotspot.

Hold the "Power" key for 3 seconds until all LED indicators illuminate in blue.

2. On your computer or other Wi-Fi enabled device, search for available Wi-Fi networks and select network name **Alcatel** (SSID) located on the bag label.

Note: Wi-Fi Password is located on the back cover of the device.

• From a **Windows PC**: Left-click **Wireless Network Connection** on the task bar to view available networks. Choose the SSID from the list of available networks.

• From a **Mac** computer: Select System Preferences >Network -> Airport. Click "Advanced" to choose SSID from the list of available networks.

• From an **iOS** device: Settings -> Wi-Fi. Choose SSID from the available networks.

• From an **Android** device: Settings -> Wi-Fi settings. Choose the SSID from the available networks.

3. Enter password located on label on back panel and click **OK**.

	LED	Description
Network Indicator	Solid Blue	Registered and connected to network.
	Flashing Blue	Network disconnected.
	Solid Red	No network, no SIM card or SIM card error, limited or no service.
Wi-Fi	Solid Blue	Wi-Fi is active.
SMS	Solid Blue	New message
	Flashing Blue	Message inbox is full.
Battery	Rapidly Flashing Blue	Working.
	Rapidly Flashing Blue	The battery is being charged.
	Solid Blue	Full charged.
	Flashing Red	The battery level is less than 10%.

WPS key Hold “WPS” key for 3 seconds to activate the WPS function. Once activated, the Wi-Fi LED indicator will flash every two seconds.
If the network is not accessed within 2 minutes device will automatically exit WPS mode.
Use the USB jack to charge your device and connect your device to the client via the USB cable.